



USER MANUAL

MODEL

IPSC
Positioning & seizing

[STICKER GOES HERE]

Crosby **ip**[®]
LIFTING CLAMPS



1 complete teeth not sharp and 1 damaged
1 hele tand niet scherp en 1 beschadigd
1 ganzer Zahn unscharf und 1 beschädigt
1 dent complète non pointue et 1 endommagée
1 diente completo no afilado y 1 deteriorado
1 hel tand uskarp og 1 beskadiget
1 hel och slö tand och 1 skadad
1 kokonainen hammas tylsä ja 1 vaurioitunut
1 hel tann uskarp og 1 skadet
1 kompletny, nieostry i 1 uszkodzony ząb



2 teeth damaged for 50%
2 tanden voor de helft beschadigd
2 Zähne zur Hälfte beschädigt
2 dents endommagées à 50%
2 dientes deteriorados al 50%
2 tænder beskadiget 50%
2 tænder skadade till 50%
2 hammasta vaurioitunut 50%
2 tenner skadet 50%
2 zęby uszkodzone w 50%



1 teeth damaged for 100% and 1 teeth damaged for 50%
1 tand helemaal en 1 tand half beschadigd
1 Zahn komplett defekt und 1 Zahn zu 50% defekt
1 dent endommagée à 100% et 1 dent endommagée à 50%
1 diente deteriorado al 100% y 1 diente deteriorado al 50%
1 tand beskadiget 100% og 1 tand beskadiget 50%
1 tand skadad till 100% och 1 tand skadad till 50%
1 hammas vaurioitunut 100% ja 1 hammas vaurioitunut 50%
1 tann skadet 100% og 1 tann skadet 50%
1 ząb uszkodzony w 100% i 1 ząb uszkodzony w 50%



2 rings damaged for 100%
2 ringen volkomen beschadigd
2 Ringe vollständig zerstört
2 bagues endommagées à 100%
2 anillos deteriorados al 100%
2 ringe beskadiget 100%
2 ringar skadade till 100%
2 rengasta vaurioitunut 100%
2 ringer skadet 100%
2 pierścienie uszkodzone w 100%



interior ring damaged for 100%
binnenste ring geheel beschadigd
Innerer Ring vollständig zerstört
bague intérieure endommagée à 100%
Anillo interior deteriorado al 100%
indre ring beskadiget 100%
indre ring skadad till 100%
sisärengas vaurioitunut 100%
innvendig ring skadet 100%
Pierścień wewnętrzny uszkodzony w 100%

These areas of damage, precisely as wear, are not covered by the warranty
Deze beschadigingen vallen buiten de garantie
Derartige Beschädigungen fallen ebenso wie Verschleiß nicht unter die Garantie
Ces dommages, tout comme l'usure, ne sont pas inclus dans la garantie
Estos deterioros no están cubiertos por la garantía
Disse skadesområder dækkes ikke af garantien
Dessa områden av skador som orsakats omfattas inte av garantin
Nämä kulumisen aiheuttamat vauriot eivät kuulu takuuseen
Disse typene skade, forårsaket av, dekkes ikke av garantien
Powyższe uszkodzenia nie są objęte gwarancją

LANGUAGES

English

USER MANUAL

EN
05

Nederlands

GEBRUIKERSHANDLEIDING

NL
09

Deutsch

BETRIEBSANLEITUNG

DE
15

Français

INSTRUCTIONS D'UTILISATION

FR
21

Español

MANUAL DE USUARIO

ES
27

Dansk

BRUGSANVISNING

DA
33

Svenska

ANVÄNDARHANDBOK

SE
37

Suomi

KÄYTTÖOPAS

FI
43

Norsk

BRUKERHÅNDBOK

NO
47

Polski

PODRĘCZNIK UŻYTKOWNIKA

PL
51

USER MANUAL

For clamp types: IPSC

Positioning & seizing



INDEX

1.	General	06
1.1	Safety precautions	06
1.2	Inspection protocols	07
1.3	How to operate the clamp	08
1.4	A reliable clamp, a secure basis for lifting	08

1. General

You have chosen a CrosbyIP clamp.

If CrosbyIP clamps are maintained as described in this manual, they will remain in optimum condition. We believe that CrosbyIP clamps are the most reliable clamps available. But using reliable tools does not automatically mean that practices are reliable. The people who work with clamps play an equally important role in reliable handling. Ensure that everyone who works with CrosbyIP clamps has been instructed in the proper application of the clamps.

Inter Product BV provides a 10 year warranty for its clamps. In order to benefit from this warranty programme and for more details on maintenance procedures, please consult www.crosbyip.com/warranty for more information.

Please read and understand these instructions before using the clamp.

1.1 Safety precautions

- Proper instruction for the personnel is of vital importance. This will contribute to maximum reliability in the working environment.
 - IPSC clamps may be applied per piece, per set or with several clamps simultaneously for the positioning and seizing of steel plates, beams and constructions. Ensure that each clamp receives its proportionate share of the load.
 - Hardness: With the IPSC clamps it is possible to handle steel with a surface hardness of up to 302 HV10. For harder steel types contact your CrosbyIP Customer Service Centre.
 - Contact your CrosbyIP Customer Service Centre before using this clamp for plates and constructions that have a radius.
 - Temperature: The standard lifting clamps may be used with temperatures that lie between 100 °C (212 °F) and -40 °C (-40 °F). For other temperatures contact your CrosbyIP Customer Service Centre.
 - There are restrictions for operation in special atmospheres (e.g. high humidity, explosive, saline, acid, alkaline).
 - Loads: For proper application of the clamp consult the load diagram 1.
 - Ensure that all attachments are properly fitted, secured and coupled.
 - For each operation only **one** plate or beam may be positioned or seized with the IPSC.
 - The clamp with the moving pivot and screwed spindle must be placed with face up when the clamps are used for horizontal plate surfaces.
- Attention:** ensure that the clamp will not be unscrewed too far, as the moving pivot (K) could fall off. If the moving pivot hits the body the clamp may not be opened further.

- Remark: when handling the load, one should ensure that the load and or clamp does not encounter obstacles which could release the load on the clamps prematurely.
- A clamp is a device that must be clean when used. Dirt has an adverse affect on the operation and also on the reliability of the clamp. When the clamp is dirty and greasy it can be cleaned with diesel oil or petroleum. Then blow dry with air or dry with a cloth and apply a little lubricant. It is important to ensure that the gripping surfaces are clean at all times. Regular cleaning will enhance the life and reliability of the clamps.

1.2 Inspection protocols

Prior to every application of the clamp it is important the clamp operator inspects the clamp for proper functioning.

Attention must be paid to the following (see illustration 2 for part reference):

- Ensure that the plate surface with which the clamp is to come into contact is free of scale, grease, oil, paint, water, ice, moisture, dirt and coatings that might impede the contact of the gripping surface with the plate.
- Inspect moving pivot (K) and the fixed pivot (C) for wear and defects. The pivots must be sharp and free of dirt (check also the movement of moving pivot (K) over the screw spindle (O)).
- Check the body (N) and shackle (S) for damage, cracks or deformation (this may indicate overloading).
- Check the screw spindle (O) for its function by opening and closing the clamp. The spindle should be easily rotatable over its full length (when the operation of the clamp is stiff or heavy, it should be removed from operation). Ensure that the clamp will not be unscrewed too far, as the moving pivot (K) could fall off.
- Check whether the W.L.L. and the jaw opening stamped on the body corresponds with the load.
- Minimum load permitted: 20% of the W.L.L.

The pivot(s) are the most critical parts in the clamp and require extra attention during inspection. Ensure in any event for good light during inspection. Observe the following rules during every inspection:
Pivot(s): Reject when the sharpness of **one** ring is damaged or worn for 50% or more.

Also the screw thread of the screw spindle may get damaged. Because of these damages it is possible that the clamp will not open and close properly. This produces hazardous situations when the clamp is placed on the plate and does not close properly. It is therefore very important to check the spindle every time before use. It is

also equally important to avoid this damage. The spindle can in fact only become damaged when the clamp is used carelessly.

Some illustrations have been included on the inside of the front cover of damaged and worn (rejected) pivots and camsegments with explanations. In most cases however the areas of damage are much less extensive. In doubtful cases an authorised repairer should assess the clamp.

1.3 How to operate the clamp

IPSC clamps are suitable for the positioning & seizing of steel plates, beams and constructions.

See illustrations 3 to 7 for part reference.

1. Place the clamp securely on the plate so that the jaw of the clamp rests on the plate (E) (3).
2. Close the clamp by turning the screw spindle (O) to the right with a tightening moment of 40 kNmm. Make sure that the moving pivot (K) gets a good close grip on the surface (4-5).
3. Tension the cables or chains gently taut and put the load on gradually. Always prevent the load from shocking!
4. As soon as the positioning is finished, the clamp must be fully free of load so that the shackle (S) of the clamp can move freely. Open the clamp by turning the screw spindle (O) to the left. The clamp can now be removed from the object (6-7).
5. The clamp may now be used again immediately or put away in opened position. This position will protect the pivots from damage.

1.4 A reliable clamp, a secure basis for lifting

10 Year warranty preventive maintenance procedure:

Parts should be replaced only when they no longer meet our standards.

10 Year warranty repair procedure:

During every repair service the most critical parts, being pivot(s) will be replaced and, when necessary, any rejected parts will be replaced.

Please consult www.crosbyip.com/warranty for more information on maintenance procedures.

Maintenance without 10 year warranty: Annually clamps are subjected to inspection* and parts will be replaced only when they no longer meet our standards.

*CrosbyIP authorised repairer

GEbruikersHANDLEIDING

Voor klemtypes: IPSC

Positioneren en sjoeren



INDEX

1.	Algemeen 10
1.1	Veiligheidsvoorschriften 10
1.2	Inspectieprocedures 11
1.3	Gebruik van de klem 12
1.4	Een betrouwbare klem, een goede basis voor hijsen 13

© The Crosby Group LLC. Niets uit deze originele gebruiksinstructie uitgave mag, op geen enkele wijze, worden veeleenvoudigd en/of openbaar gemaakt zonder voorafgaande schriftelijke toestemming van The Crosby Group LLC.

Explanation test certificate

Verklaring testcertificaat

Erläuterung des Prüfscheins

Explication du certificat d'essai

Explicación del certificado de prueba

Forklaring af testcertifikat

Förklaring till provningsintyg

Testisertifikaatin selvitys

Forklaring av testcertifikat

Świadectwo badania – objaśnienie

EN EU Declaration of EU Declaration of Conformity: We hereby declare that the equipment described below conforms to the relevant fundamental safety and health requirements of the appropriate EU Directives, both in its basic design and construction as well as in the version marketed by us. This declaration will cease to be valid if any modifications are made to the machine without our express approval.

Relevant EU Directives: **EU Machinery Directive (2006/42/CE)**. Applied standards: **ASME B30.20**

NL EU-conformiteitsverklaring: Hiermee verklaren wij dat de hierna vermelde machine op grond van haar basisvormgeving en constructie en in de door ons in omloop gebrachte uitvoering beantwoordt aan de desbetreffende veiligheids- en gezondheidsvoorschriften van de EU-richtlijnen. Na een wijziging aan de machine die niet in overleg met ons wordt uitgevoerd, verliest deze verklaring haar geldigheid.

Desbetreffende EU-richtlijn: **EU-machinerichtlijn (2006/42/CE)**. Toegepaste normen: **ASME B30.20**

DE EG-Konformitätserklärung: Hiermit erklären wir, daß die nachfolgend bezeichnete Maschine aufgrund ihrer Konzipierung und Bauart sowie in der von uns in Verkehr gebrachten Ausführung den einschlägigen grundlegenden Sicherheits- und Gesundheitsanforderungen der jeweiligen EG-Richtlinien entspricht. Bei einer nicht mit uns abgestimmten Änderung der Maschine verliert diese Erklärung ihre Gültigkeit.

Einschlägige EG-Richtlinien: **EG-Maschinenrichtlinie (2006/42/EG)**. Angewandte Normen: **ASME B30.20**

FR Déclaration de conformité UE : Par la présente, nous déclarons que l'équipement décrit ci-après est conforme, de par sa conception et sa construction et de par le modèle que nous avons mis sur le marché, aux exigences fondamentales de sécurité et de santé des directives européennes pertinentes. En cas de modification de la machine effectuée sans notre accord, cette déclaration sera caduque.

Directives UE pertinentes : Directive Machines (2006/42/CE). Normes appliquées : **ASME B30.20**

ES Declaración de la UE de la Declaración de conformidad de la UE: Por la presente declaramos que el equipo descrito a continuación cumple los requisitos de salud y seguridad fundamentales y relevantes de las Directivas de la UE apropiadas, tanto en su diseño básico y construcción como en la versión comercializada por nosotros. Esta declaración dejará de ser válida si se efectúa alguna modificación a la máquina sin nuestra aprobación expresa.

Directivas de la UE relevantes: **Directiva de maquinaria de la UE (2006/42/CE)**. Normativa aplicada: **ASME B30.20**

DA EU-overensstemmelseserklæring: Vi erklærer hermed, at udstyret, som er beskrevet nedenfor, er i overensstemmelse med de relevante grundlæggende sikkerheds- og sundhedskrav fra de relevante EU-direktiver, både i dets grundlæggende udformning og konstruktion samt i den version, der markedsføres af os. Denne erklæring vil ophøre med at være gyldig, hvis der foretages ændringer på maskinen uden vores udtrykkelige godkendelse.

Relevante EU-direktiver: **EU-maskindirektiv (2006/42/CE)**. Anvendte standarder: **ASME B30.20**

SE Försäkran om EU-överensstämmelse: Vi intygar härmed att utrustningen som beskrivs nedan uppfyller relevanta grundläggande säkerhets- och hälsokrav i enlighet med tillämpliga EU-direktiv, både under dess grundläggande design och tillverkning såväl som i den version som marknadsförs av oss. Detta intyg kommer att upphöra att gälla om några ändringar görs på maskinen utan vårt uttryckliga godkännande.

Relevanta EU-direktiv: **Europeiska maskindirektivet (2006/42/CE)**. Tillämpade standarder: **ASME B30.20**

FI EU:n vaatimustenmukaisuusvakuutus: Vakuutamme, että seuraavassa kuvattu laite täyttää asianomaisten EU-direktiivien asiaan kuuluvat perusturvallisuus- ja terveysvaatimukset sekä perussuunnittelultaan että rakenteeltaan ja lisäksi meidän myymämme version osalta. Tämä vakuutus mitätöityy, jos laitteeseen tehdään mitä tahansa muutoksia ilman meidän erityistä hyväksyntäämme.

Asianomaiset EU-direktiivit: **EU:n konedirektiivi (2006/42/CE)**. Sovelletut standardit: **ASME B30.20**

NO EU-erklæring EU-samsvarserklæring: Vi erklærer herved at utstyret som beskrives nedenfor er i samsvar med fundamentale krav til sikkerhet og helse i de relevante EU-direktivene, både i dets grunnleggende design og konstruksjon og i versjonen som vi markedsfører. Denne erklæringen gjelder ikke lenger dersom det gjøres endringer på utstyret uten uttrykkelig godkjenning.

Relevante EU-direktiver: **Maskindirektivet (2006/42/EU)**. Anvendte standarder: **ASME B30.20**

PL Deklaracja zgodności WE: Niniejszym oświadczamy, że niżej opisane urządzenie (zarówno jego podstawowa konstrukcja, jak i wersja wprowadzona przez nas na rynek) spełnia obowiązujące wymagania w zakresie bezpieczeństwa odpowiednich dyrektyw UE. Niniejsza deklaracja traci ważność w przypadku wprowadzania jakichkolwiek zmian w urządzeniu bez naszej wyraźnej zgody.

Stosowne dyrektywy UE: Dyrektywa Parlamentu Europejskiego i Rady ws. maszyn (2006/42/WE). Obowiązujące normy: **ASME B30.20**

.....

.....
Manufacturer/Fabrikant/Hersteller/Fabricant/Fabricante/Produttore/Fabricante

CrosbyIP – Inter Product BV
Celsiusstraat 51
6716 BZ Ede
The Netherlands

Ede 01-03-2011



(W. Caubergs)

Manufacturer:

CrosbyIP – Inter Product BV
Celsiusstraat 51
6716 BZ Ede
The Netherlands

BELGIUM

Industriepark Zone B n°26
2220 Heist-op-den-Berg
P: (+32) (0)15 75 71 25
F: (+32) (0)15 75 37 64
sales@crosbyeurope.com

FRANCE

21, rue du Petit Albi
Parc d’Affaires Silic
95800 Cergy - St. Christophe
P: (+33) (0)1 34 201 180
F: (+33) (0)1 34 201 188
sales@crosbyeurope.fr

UNITED KINGDOM


Station Street
Cradley Heath
West Midlands B64 6AJP
P: (+44) (0)1226 290 516
F: (+44) (0)1226 240 118
sales@crosbyeurope.co.uk

U.S.A


P.O. Box 3128
Tulsa, OK 74101
P: (+1) (918) 834 46 11
F: (+1) (918) 832 09 40
crosbygroup@thecrosbygroup.com

CANADA


145 Heart Lake Road
Brampton, Ontario L6W 3K3
P: (+1) 905 451 9261
F: (+1) 877 260 5106
sales@crosby.ca

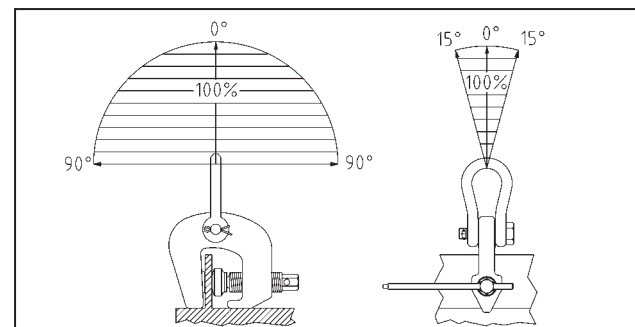


1

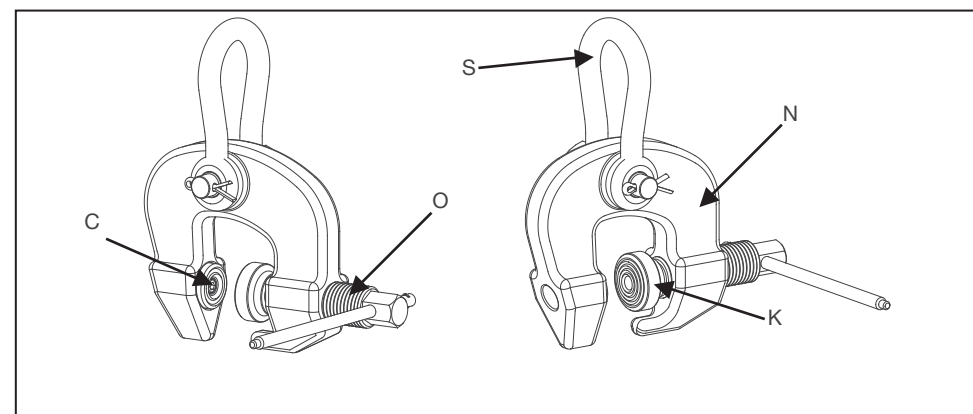


2

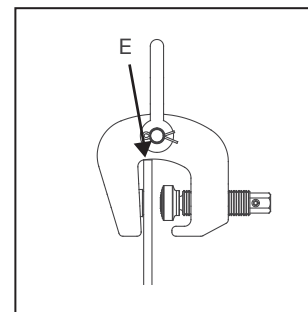


3

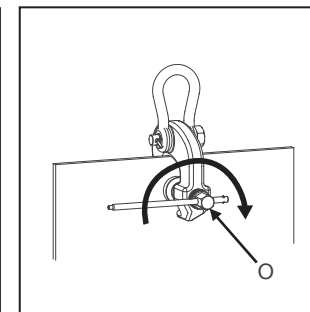


4

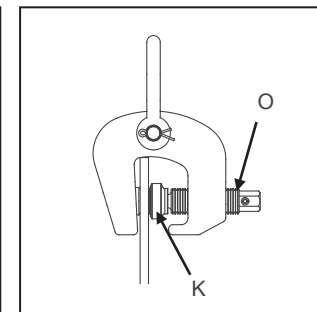

5

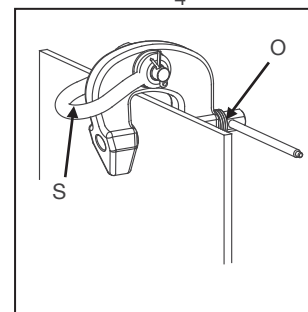

6

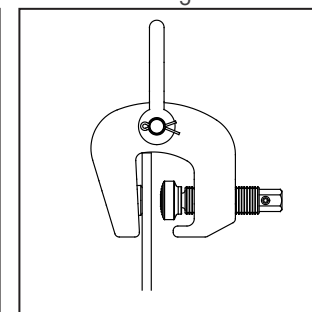

7



WARNING

- Loads may disengage from clamp if proper procedures are not followed.
- A falling load may cause serious injury or death.
- The clamp shall not be loaded in excess of its rated load or handle any load for which it is not designed. Read instructions in user manual to determine minimum load permitted and proper load thickness.
- Never operate a damaged or malfunctioning clamp, or a clamp with missing parts.
- Clamp not to be used for personnel hoisting.
- Prohibition of handling above persons.
- Do not leave suspended loads unattended.
- Operator and other personnel shall stay clear of the load.
- Do not lift loads higher than necessary.
- Do not make alterations or modifications to clamp.
- Do not remove or obscure warning labels.
- See ANSI/ASME B30.20 BELOW-THE-HOOK LIFTING DEVICES for additional information.
- Read, understand, and follow these instructions and the product safety information in user manual before using clamp.

