
CROSBY SWIVEL HOIST RING WARNING AND APPLICATION INSTRUCTIONS



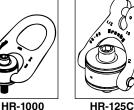

HR-125/SS-125 (Red Washer) HR-125M SS-125M (Silver Washer)

(Red Washer) HR-1000M (Sliver Washer) HR-1000CT

HR-125W

(Blue Washer) Hoist Ring Application Assembly Safety

- Use swivel hoist ring only with a ferrous metal (steel, iron) or soft metal (i.e., aluminum) loads (workpiece). Do not leave threaded end of hoist ring in aluminum loads for long time periods due to corrosion.
- For subsea or marine environment applications, use the HR-1000CT series Hoist Ring only.
- After determining the loads on each hoist ring, select the proper size hoist ring using the Working Load Limit ratings in Table 1, 2, 3, 5 and 6 for UNC threads and Table 4 and 7 for Metric threads.
- Drill and tap the workpiece to the correct size to a minimum depth of one-half the threaded shank diameter plus the threaded shank length. See rated load limit and bolt torque requirements imprinted on top of the swivel trunnion (See Table 1 through Table 7).
- Install hoist ring to recommended torque with a torque wrench making sure the bushing flange meets the load (workpiece) surface.
- Never use spacers between bushing flange and mounting surface.
- Always select proper load rated lifting device for use with Swivel Hoist Ring.
- Attach lifting device ensuring free fit to hoist ring bail (lifting ring) (Fig. 1).
- Apply partial load and check proper rotation and alignment. There should be no interference between load (workpiece) and hoist ring bail (Fig. 2).
- Special Note: When a Hoist Ring is installed with a retention nut, the nut must have a full thread engagement and must meet one of the following standards to develop the Working Load Limit (WLL).

1. ASTM A-563

(A) Grade D Hex Thick

- (B) Grade DH Standard Hex
- 2. SAE Grade 8 Standard Hex

Hoist Ring Inspection / Maintenance

- Always inspect hoist ring before use.
- Regularly inspect hoist ring parts (Fig.3).
- Never use hoist ring that shows signs of corrosion, wear or damage.
- Never use hoist ring if bail is bent or elongated.
- Always be sure threads on shank and receiving hole are clean, not damaged, and fit properly.
- Always check with torque wrench before using an already installed hoist ring.
- Always make sure there are no spacers (washers) used between bushing flange and the mounting surface. Remove any spacers (washers) and retorque before use.
- Always ensure free movement of bail. The bail should pivot 180 degrees and swivel 360 degrees (Fig. 4).
- Prior to loading, ensure free movement of bail. The bail should pivot 180 degrees and swivel 360 degrees (Fig. 4).


- When a hoist ring is used in a side load application, ensure equal loading on the pins by aligning the bail as shown in (Fig. 5).
- Always be sure total workpiece surface is in contact with hoist ring bushing mating surface. Drilled and tapped hole must be 90 degrees to load (workpiece) surface.


A WARNING


- Loads may slip or fall if proper Hoist Ring assembly and lifting procedures are not used.
- A falling load may cause serious injury or death.
- Install hoist ring bolt to torque requirements listed in tables 1, 2, 3, 4, 5, 6 & 7 for the HR-125, HR-1000, HR125C, HR-1000CT, HR-125M, HR-1000M and HR125W, SS-125 and SS-125M respectively.
- Web sling HR-125W spool bolt must be securely tightened in place. The jam nut must then be securely tightened onto the connecting bolt, see Table 5, last column.
- Read, understand and follow all instructions and chart information.
- Do not use with damaged slings, chain, or webbing. For inspection criteria see ASME B30.9.
- Use only genuine Crosby parts as replacements.
- HR-125C chain connecting pin must be properly secured with the locking pin into the clevis ear.
- Before use tighten bolt first, then tighten nut (HR-125W).

Operating Safety

- Never exceed the capacity of the swivel hoist ring, see Tables 1, 2, 3, 5 and 6 for UNC threads and Tables 4 and 7 for Metric threads. (See next page for tables.)
- When using lifting slings of two or more legs, make sure the forces in the legs are calculated using the angle from the horizontal sling angle to the leg and select the proper size swivel hoist ring to allow for the angular forces.

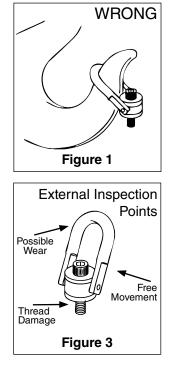


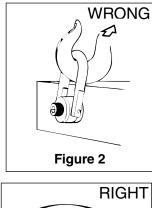

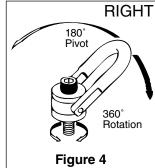

206

Table 1						
Hoist		HR-12	5	HR-1000		
Working Load Limit* 5:1 (Ibs.)	Ring Bolt Torque Ft. Ibs. †	Bolt Size ‡ (in.)	Effective Thread Projection Length (in.)	Bolt Size ‡ (in.)	Effective Thread Projection Length (in.)	
800 ††	7	5/16 - 18 x 1.50	.58	5/16 - 18 x 1.50	.52	
1000 ††	12	3/8 - 16 x 1.50	.58	3/8 - 16 x 1.50	.52	
2500	28	1/2 - 13 x 2.00	.70	1/2 - 13 x 2.25	.69	
2500 ††	28	1/2 - 13 x 2.50	1.20	1/2 - 13 x 2.75	1.19	
4000	60	5/8 - 11 x 2.00	.70	5/8 - 11 x 2.25	.69	
4000 ††	60	5/8 - 11 x 2.75	1.45	5/8 - 11 x 3.00	1.44	
5000	100	3/4 - 10 x 2.25	.95	3/4 - 10 x 2.50	.94	
5000 ††	100	3/4 - 10 x 2.75	1.45	3/4 - 10 x 3.00	1.44	
7000 Ω	100	3/4 - 10 x 2.75	.89	3/4 - 10 x 3.00	.85	
7000 †† Ω	100	3/4 - 10 x 3.50	1.64	3/4 - 10 x 3.50	1.35	
8000	160	7/8 - 9 x 2.75	.89	7/8 - 9 x 3.00	.85	
8000 ††	160	7/8 - 9 x 3.50	1.64	7/8 - 9 x 3.50	1.35	
10000	230	1 - 8 x 3.00	1.14	1 - 8 x 3.50	1.35	
10000 ††	230	1 - 8 x 4.00	2.14	1 - 8 x 4.50	2.35	
15000	470	1-1/4 - 7 x 4.50	2.21	1-1/4 - 7 x 5.00	2.09	
24000	800	1-1/2 - 6 x 6.75	2.97	1-1/2 - 6 x 5.50	2.59	
30000	1100	2 - 4-1/2 x 6.75	2.97	—	_	
50000	2100	2-1/2 - 4 x 8.00	4.00	—	_	
75000	4300	3 - 4 x 10.50	5.00	_	_	
100000	5100	3-1/2 - 4 x 13.00	7.00	—	_	

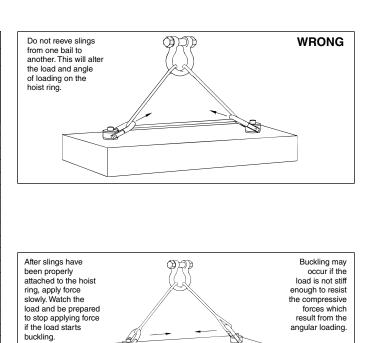

^a Ultimate Load is 4.5 times Working Load Limit for 7000# Hoist Ring when Tested in 90° orientation. All sizes are individually proof tested to 2-1/2 times the Working Load Limit.

*, \dagger , \dagger , \dagger , \ddagger (See footnote at bottom of Table 5).

Table 2								
	HR-125C Swivel Hoist Ring to Grade 8 Chain							
Working Load Limit 4:1 (Ibs.) **	Hoist Ring Bolt /orking Load Limit in Bolt Projection Spectrum 4:1 Ft. Size Length Chain Siz							
4500	1bs.† 60	(in.)‡ 5/8 - 11 x 2.00	(in.) .71	(in mm) 1/4 - 5/16 - 7 - 8				
4500 ††	60	5/8 - 11 x 2.75	1.46	1/4 - 5/16 - 7 - 8				
7100	100	3/4 - 10 x 2.75	.90	3/8 - 10				
7100 ††	100	3/4 - 10 x 3.50	1.65	3/8 - 10				
12000	230	1 - 8 x 3.00	1.15	1/2 - 13				
12000 ††	230	1 - 8 x 4.00	2.15	1/2 - 13				
18100	470	1-1/4 - 7 x 4.50	2.22	5/8 - 16				

Table 3								
	HR-1000CT							
Working Load Limit 5:1 (lbs.) ****	Hoist Ring Bolt Torque in Ft. Ibs. †	Bolt Size (in.) ∆	Effective Thread Projection Length (in.)					
2000	28	1/2 - 13 x 2.25	.69					
3200	60	5/8 - 11 x 2.25	.69					
5400	100	3/4 - 10 x 3.00	.85					
7200	160	7/8 - 9 x 3.00	.85					
10000	230	1 - 8 x 3.50	1.35					
13500	470	1 1/4 - 7 x 5.00	2.09					
20000	800	1 1/2 - 6 x 5.50	2.59					
28000	1100	2 - 4.5 x 7.50	3.21					

Table 4							
Working Load Limit (kg)***			HR-12	25M	HR-1000M		
Design Factor 5:1	HR-125M Design Factor 4:1	Hoist Ring Bolt Torque in Nm †	Bolt Size ‡‡ (mm)	HR-125M Effective Thread Projection Length (mm)	Bolt Size‡‡ (mm)	HR-1000M Effective Thread Projection Length (mm)	
400	500	10	M 8 X 1.25 X 40	16.9	M 8 X 1.25 X 40	15.2	
450	550	16	M 10 X 1.50 X 40	16.9	M 10 X 1.50 X 40	15.2	
1050	1300	38	M 12 X 1.75 X 50	17.2	M 12 X 1.75 X 55	15.5	
1900	2400	81	M 16 X 2.00 X 60	27.2	M 16 X 2.00 X 65	25.5	
2150	2700	136	M 20 X 2.50 X 65	31.2	M 20 X 2.50 X 70	30.5	
3000	3750	136	M 20 X 2.50 X 75	28.1	M 20 X 2.50 X 80	25.4	
4200	5250	312	M 24 X 3.00 X 80	33.1	M 24 X 3.00 X 90	35.4	
7000	8750	637	M 30 X 3.50 X 120	65.1	M 30 X 3.50 X 140	66.2	
11000	13750	1005	M 36 X 4.00 X 150	60.6	M 36 X 4.00 X 150	56.2	
12500	15600	1005	M 42 X 4.50 X 160	70.6	—	_	
13500	16900	1350	M 48 X 5.00 X 160	101	—	_	
22300	27900	2847	M 64 x 6.00 x 204	101	—	_	
31500	39400	5830	M 72 x 6.00 x 265	132	_	_	
44600	55800	6914	M 90 x 6.00 x 330	177	—		

See Footnotes on next page.

	Table 5							
	HR-125W Swivel Hoist Ring to Webbing							
HR-125W Web Sling				HR-125W Working Load			Torque in	
Round Sling Size (in.)	Web Width (in.)	Eye Width (in.)	Ply. (in.)	•	Hoist Ring Bolt Torque in Ft. Ibs. †	Bolt Size (in.) ‡	Effective Thread Projection Length (in.)	Ft Ibs. Spool bolt and nut ‡‡‡
1 & 2	2	2	2	3-1/4	100	3/4 - 10 x 2.75	.90	90
1 & 2	2	2	2	3-1/4	100	3/4 - 10 x 3.50	1.65	90
3	3	1.5	2	4-1/2	230	1 - 8 x 3.00	1.15	110
3	3	1.5	2	4-1/2	230	1 - 8 x 4.00	2.15	110
4	4	2	2	6-1/4	470	1-1/4 - 7 x 4.50	2.22	130

† Tightening torque values shown are based upon threads being clean, dry and free of lubrication.

Footnotes below relate to tables 1-5

* Ultimate load is 5 times the Working Load Limit. Individually proof tested to 2-1/2 times the Working Load Limit.

** Ultimate load is 4 times the Working Load Limit. Individually proof tested to 2-1/2 times the Working Load Limit. *** Individually proof tested to 2-1/2 times the Working Load Limit based on 4:1 design factor **** Ultimate load is 5 times the Working Load Limit. Individually proof tested to 2 times the Working Load Limit.

++ Long bolts are designed to be used with soft metal (i.e., aluminum) workpiece. While the long bolts may also be used with ferrous metal (i.e., steel & iron) workpieces, short bolts are designed for ferrous workpieces only.

‡ Bolt specification is a Alloy socket head cap screw to ASTM A574. All threads are UNC .

 \pm Bolt specification is a Grade 1.29 Alloy socket head cap screw to DIN 912. All threads are metric (ASME/ANSI B18.3.1m) \pm Bolt specification is a Grade 1.29 Alloy socket head cap screw to ASTM A320. All threads are UNC.

±±± Tighten bolt to specified torque, then tighten nut to specified torque.

All Swivel Hoist Rings are individually proof tested.

Table 6						
SS-125 ¥¥						
Working Load Limit (Ibs.) ¥	Torque in Ft. Lbs. †	Bolt Size (in.) §	Effective Thread Projection (in.)			
400	3.5	5/16 - 18 x 1	.29			
400	3.5	5/16 - 18 x 1.25	.54			
500	6	3/8 - 16 x 1.25	.54			
1250	14	1/2 - 13 x 2	.78			
1250	14	1/2 - 13 x 2.25	1.03			
1250	14	1/2 - 13 x 2.5	1.28			
2000	30	5/8 - 11 x 2	.78			
2000	30	5/8 - 11 x 2.25	1.03			
2000	30	5/8 - 11 x 2.5	1.28			
2500	50	3/4 - 10 x 2.25	1.03			
2500	50	3/4 - 10 x 2.75	1.53			
3500	50	3/4 - 10 x 2.75	1.04			
3500	50	3/4 - 10 x 3.25	1.54			
4000	80	7/8 - 9 x 2.75	1.04			
4000	80	7/8 - 9 x 3	1.29			
5000	115	1 - 8 x 3	1.29			
5000	115	1 - 8 x 3.25	1.54			
5000	115	1 - 8 x 4	2.29			
7500	235	1-1/4 - 7 x 4	1.89			
12000	400	1-1/2 - 6 x 5.5	2.70			
15000	550	2 - 4-1/2 x 5.75	2.96			
25000	1050	2-1/2 - 4 x 8	4.00			
25000	1050	2-1/2 - 8 x 8	4.00			
37500	2150	3 - 4 x 10.25	5.00			
50000	2550	3-1/2 - 4 x 13	7.00			

Table 7						
SS-125M ¥¥						
SS-125M ¥¥ Working Load Limit (Kg) ¥	Torque in Lbs. †	Bolt Size (mm) §§	Effective Thread Projection (mm)			
200	4	M 8 x 1.25x30	13			
250	8	M 10 x 1.50x35	18			
525	18	M 12 x 1.75x50	19			
950	40	M 16 x 2.00x60	29			
1075	68	M 20 x 2.50x65	34			
1500	68	M 20 x 2.50x75	32			
2100	108	M 24 x 3.00x80	37			
2100	108	M 30 x 3.50x110	58			
3500	318	M 30 x 3.50x95	42			
3500	318	M 30 x 3.50x115	62			
5500	542	M 36 x 4.00x135	64			
6250	542	M 42 x 4.50x155	82			
6750	746	M 48 x 5.00x155	82			
11150	1423	M 64 x 6.00x205	101			
15750	2915	M 72 x 6.00x265	132			
22300	3459	M 90 x 6.00x330	177			
potnotes below relate to Tables 6 and 7						

Footnotes below relate to Tables 6 and 7 ¥ Ultimate load is 5 times the Working Load Limit. Individually proof tested to

Ultimate load is 5 times the Working Load Limit. Individually proof tested to 2 times the Working Load Limit.
Itimes the Working