


# McKissick® Plain Bore Sheaves

"A" Nominal Outside Diameter (in)	Stock Number	Wire Rope Diameter (in)	"D" Bore Size (in)	Hub Width (in)	Rim Width (in)	"C" Nominal Hub Outside Diameter (in)	"B" Nominal Tread Diameter (in)	Material	Approx. Weight (lb)
20.00	4010901	1	4.250	2.750	2.12	6.50	16.50	R.F.	80.0
24.00	4012749	9/16	6.500	3.375	3.12	8.00	22.00	R.F.	148
24.00	*4014408	5/8	4.722	2.750	1.50	6.50	21.75	R.F.	120
24.00	4011385	1	3.000	2.500	2.38	4.50	21.12	R.F.	125
24.00	4012785	1	6.100	2.875	2.62	8.00	21.12	R.F.	130
24.00	4011223	1-1/8	4.500	3.000	2.75	6.50	20.06	R.F.	130
24.00	2029333	1-1/8	6.500	3.375	3.12	8.00	20.06	R.F.	132
24.00	4011410	1-1/2	6.500	3.375	3.12	8.25	20.00	R.F.	186
30.00	2026302	7/8	6.500	3.375	3.12	8.00	27.00	R.F.	187
30.00	2029382	1/1/4	7.875	3.500	3.12	9.50	26.38	R.F.	225
36.00	4012160	1-1/8	6.500	3.375	3.12	8.25	32.25	R.F.	341
36.00	4012730	1-1/2	7.875	3.500	3.25	9.50	32.00	R.F.	302
42.00	4015844	1-1/8	8.875	3.625	3.25	11.00	38.50	R.F.	460
42.00	4015853	1-1/4	8.875	3.625	3.25	11.00	38.38	R.F.	460
42.00	4015719	1-1/4	10.875	3.625	3.38	12.50	38.38	R.F.	443
42.00	4015719	1-1/4	10.875	3.625	3.38	12.50	38.38	R.F.	443

\*Without flame hardening.

 Custom sheaves are available.

## VIDEO PODCAST SERIES

Our experts answer some of your most common safe rigging, lifting, and securement questions in our video podcast series, *Ask the Expert*.

Watch four episodes on sheaves:

- Bronze bushing vs roller bushing
- Understanding groove hardness
- How to know when it's time to replace sheaves
- How to extend the life of a sheave

## Ask the Expert

VIDEO PODCAST

[thecrosbygroup.com/podcast-sheaves](http://thecrosbygroup.com/podcast-sheaves)

Be sure to subscribe to The Crosby Group's YouTube channel to catch every new video as soon as it's released.




Ep. 27 Sheaves: bronze bushing vs roller bushing



Ep. 32 How to know when it's time to replace sheaves



Ep. 30 Understanding sheave groove hardness

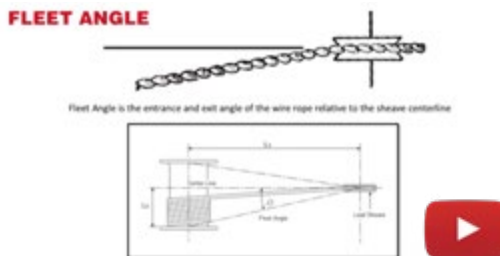

Ep. 34 How to extend the life of a sheave