## FORGED EYE BOLT

### WARNINGS & APPLICATION INSTRUCTIONS





Regular Nut Eye Bolt G-291

٠

Shoulder Nut Eye Machinery Eye Bolt Bolt G-277 S-279 / M-279

# Important Safety Information -Read & Follow

#### Inspection/Maintenance Safety:

- Always inspect eye bolt before use.
- Never use eye bolt that shows signs of wear or damage.
- Never use eye bolt if eye or shank is bent or elongated.
- Always be sure threads on shank and receiving holes are clean.
- Never machine, grind, or cut eye bolt.
- Do not leave threaded end of machinery eye bolt in aluminum loads for long periods of time as it may cause corrosion.

#### **Assembly Safety:**

- Never exceed load limits specified in Table I & Table 2.
- Never use regular nut eye bolts for angular lifts.
- Always use shoulder nut eye bolts (or machinery eye bolts) for angular lifts.
- For angular lifts, adjust working load as follows:

ANGLE FROM "IN-LINE"	ADJUSTED WORKING LOAD LIMIT
5 degrees	100% of rated working load
15 degrees	80% of rated working load
30 degrees	65% of rated working load
45 degrees	30% of rated working load
90 degrees	25% of rated working load

- Never undercut eye bolt to seat shoulder against the load.
- Always countersink receiving hole or use washers with sufficient
  I.D. to seat shoulder.
- Always screw eye bolt down completely for proper seating.
- Always tighten nuts securely against the load.

Table 1 (In-Line Load)				
Size (in)	Working Load Limit (Ib)			
1/4	650			
5/16	1,200			
3/8	1,550			
1/2	2,600			
5/8	5,200			
3/4	7,200			
7/8	10,600			
1	13,300			
1-1/8	15,000			
1-1/4	21,000			
1-1/2	24,000			
1-3/4	34,000			
2	42,000			
2-1/2	65,000			

#### **WARNING**

- Load may slip or fall if proper eye bolt assembly and lifting procedures are not used.
- A falling load can seriously injure or kill.
- Read and understand these instructions, and follow all eye bolt safety information presented here.
- Read, understand, and follow information in diagrams and charts below before using eye bolt assemblies.

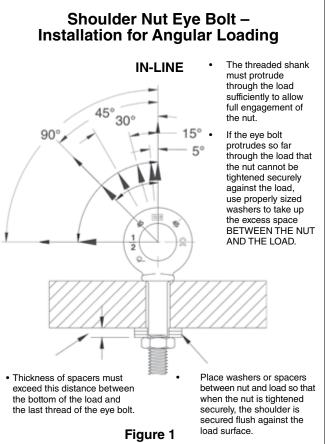


Table 2 (In-Line Load)				
Metric Size	Working Load Limit - kg			
m6	200			
m8	400			
m10	640			
m12	1000			
m16	1800			
m20	2500			
m24	4000			
m27	5000			
m30	6000			
m36	8500			
m42	14000			
m48	17300			
m64	29500			